



VIPP15-16 HANDLE CHANGE


GUIDE

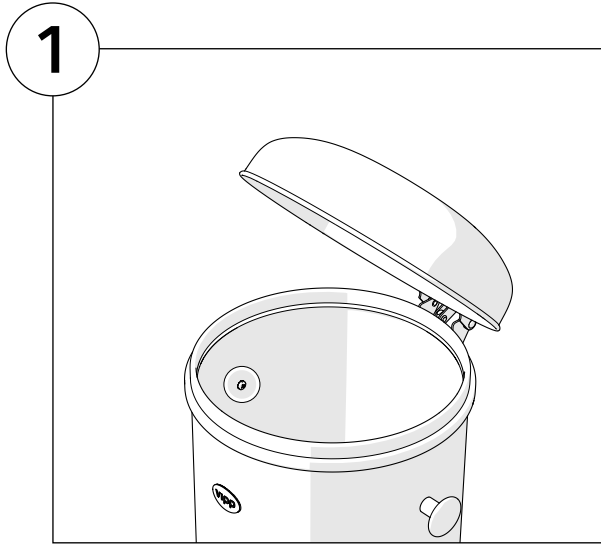


Locate the screw within the bin.

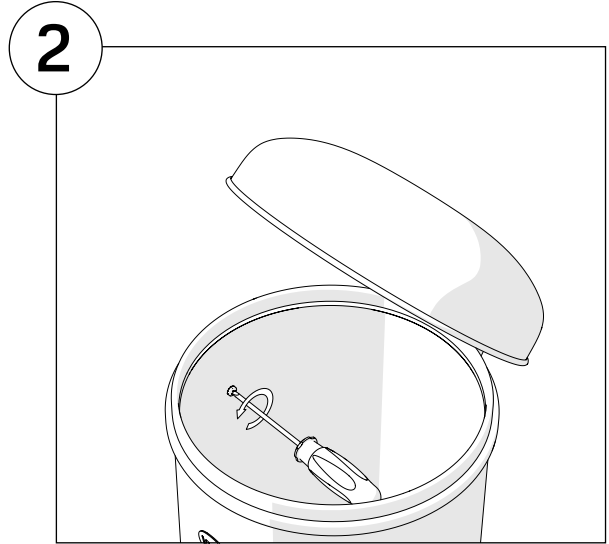

Unscrew the needed screw.

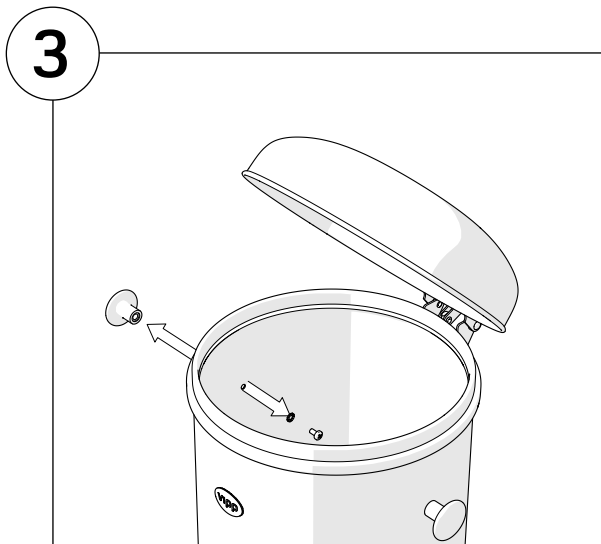


Take off the part and replace the handle.

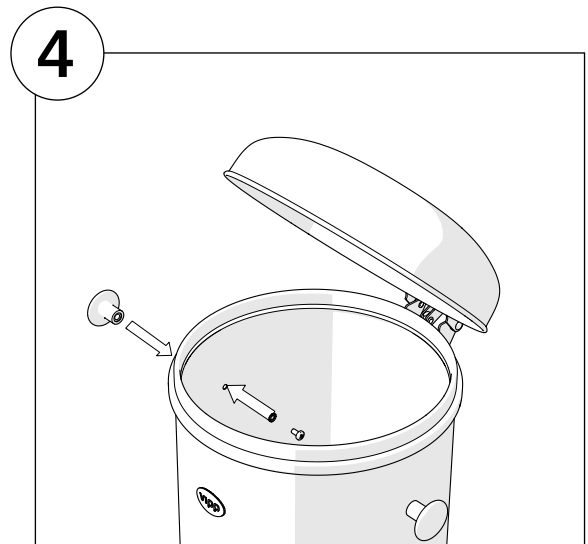

Assemble the parts again.

VIPP15-16 HANDLE CHANGE

GUIDE

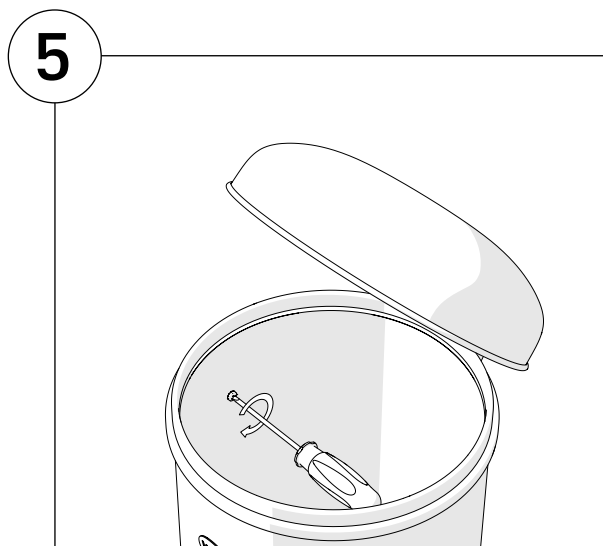

Tighten the screw