



# VIPP501 CHANGE OF SILICONE RING


## GUIDE

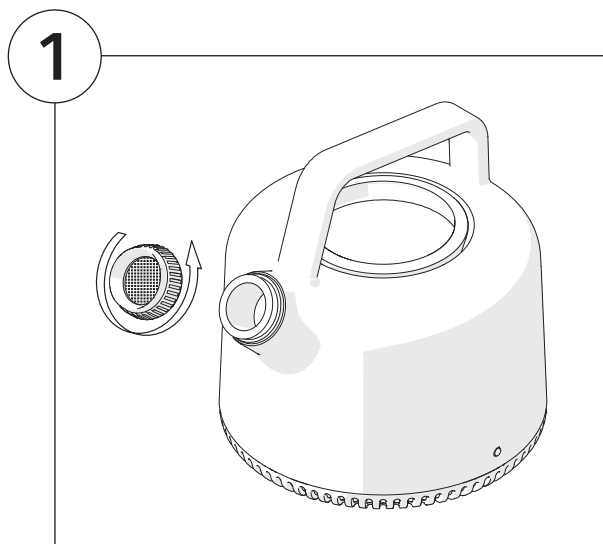


Unscrew the spout.

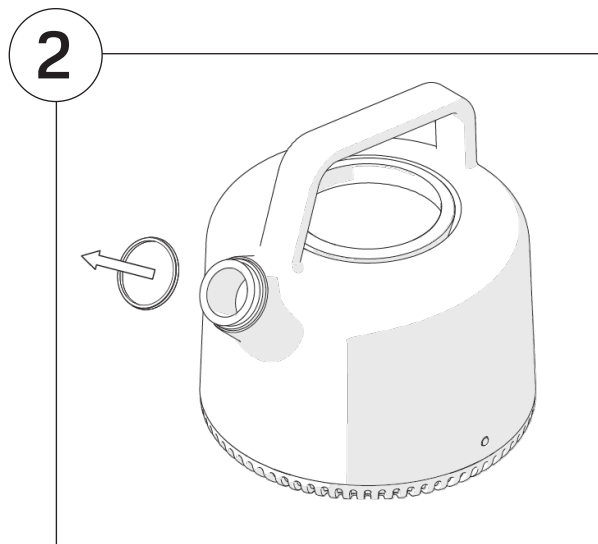

Remove the black silicone ring.

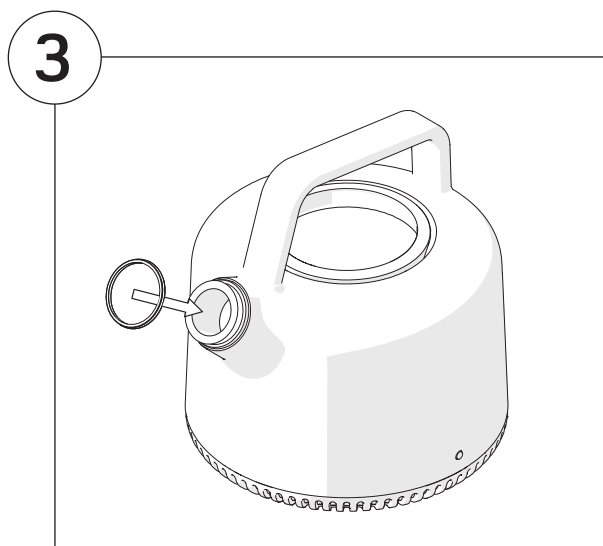

Reattach the new silicone ring.

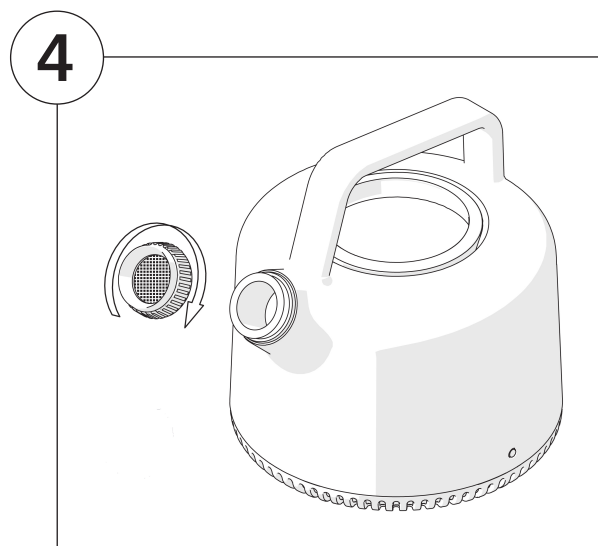

Reattach the spout by screwing it on the kettle.