



VIPP501 CHANGE OF SPOUT COMPONENTS


GUIDE

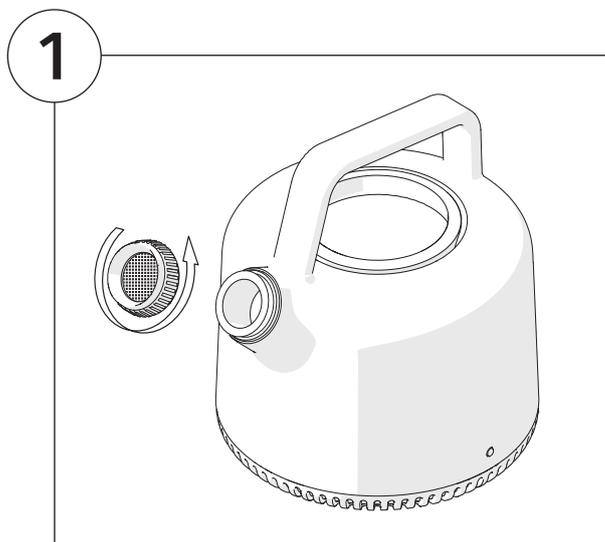


Unscrew the spout.

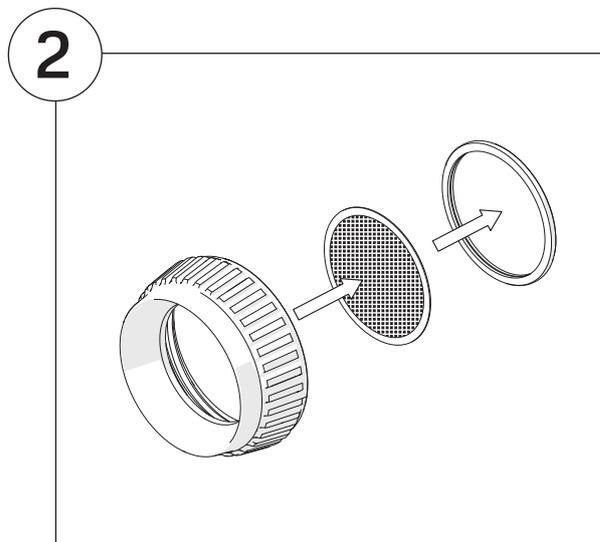

Pull out the filter and filter gasket.

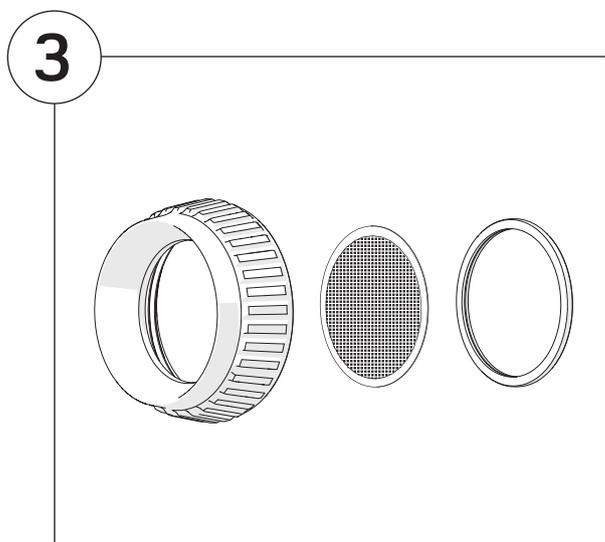


Replace the needed part.

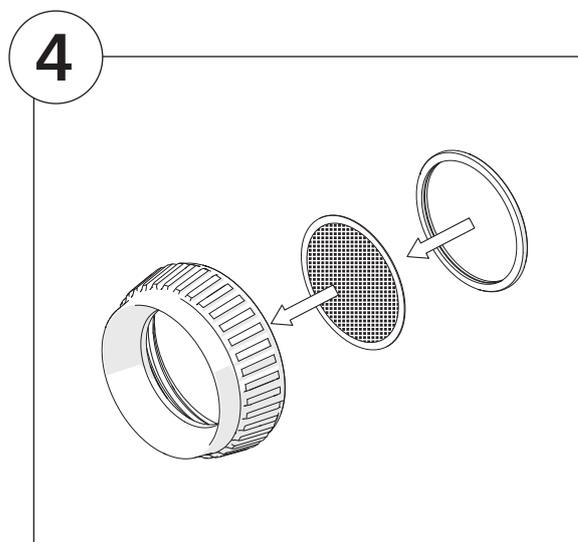

Assemble the spout in the showed sequence.

VIPP501 CHANGE OF SPOUT COMPONENTS

GUIDE

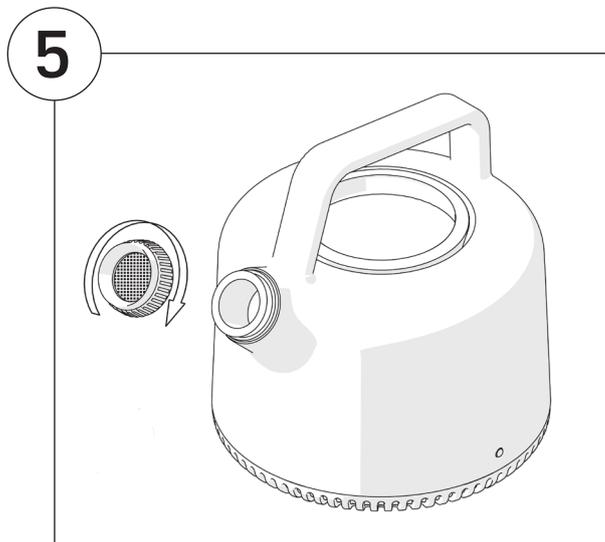

Reattach the spout by screwing it on the kettle.