
CODING A REMOTE CONTROL INTO A EASYROLLER OR SHEDMASTER

tip The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

CODING A REMOTE CONTROL INTO OPENER

STEP ONE

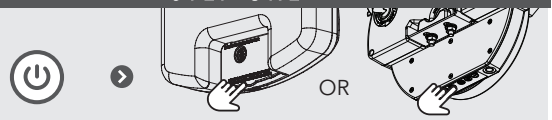

Switch power on

remove controls cover

STEP TWO



HOLD

Opener beeps



HOLD for 3 sec

RELEASE

HOLD for 3 sec

Release both buttons

STEP THREE



Press to test

REMOTELY CODING A REMOTE CONTROL

tip Remotely coding works when you have a pre-coded remote control and are in range of the opener.

STEP ONE



Take a pre-coded remote and press the button to duplicate

STEP TWO



Use a pen,

HOLD for 2 sec

the middle button through the coding hole

STEP THREE

Opener flashes & beeps



Take new remote

HOLD for 3 sec

RELEASE

HOLD for 3 sec

RELEASE

STEP FIVE

Opener stops flashing & beeping



Press to test

CHANGING A BATTERY

tip Battery Type: 1 x CR2032.

STEP ONE



HOLD

Check Light Status Table


Light Status	Battery
Solid	OK
Flashing	Replace
No light	Replace

STEP TWO



Use screwdriver to remove scews and open

STEP THREE

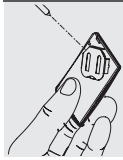

Use non-metallic object to push out.

WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe of fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has be swallowed or placed inside any part of the body, SEEK IMMEDIATE medical attention.