

Table of Contents

1. Important Safety Warnings!	3		
<u>Installation Instructions</u>			
2. Before you Begin	5	14. Coding a Transmitter	14
3. Tools Required	5	14.1 Storing the Transmitter Code	14
4. Kit Contents	6	14.2 Remotely Coding Transmitters	14
5. Position	6	14.3 Vacation Mode	14
6. Fit the Opener	7	14.4 Aux Output	14
7. Bracket Position	7	14.5 PET (Pedestrian) Mode	15
8. Perforated Angle	8	14.7 Erasing All Transmitter Codes	15
9. Mounting Brackets and Arms	9	14.6 Courtesy Light	15
10. Connect to Power	9	14.8 Optional Wall Mounted Transmitter	15
11. Setting Limits	10	<u>Home Owner Instructions</u>	
11.1 Setting the Datum:	10	15. Opener Safety & Security	16
11.2 Set the Limit Positions:	10	15.1 Your Door CAN NOT be used when:	16
11.3 Clearing the Door Limit Positions:	11	15.2 Your Door CAN be used when:	16
11.4 Re-profiling the Door:	11	15.3 To Disengage the Opener:	16
11.5 Controller memory reset:	11	15.4 To Re-Engage the Opener:	16
11.6 Setting the PET (Pedestrian Mode) position:	11	16. Operating your Opener	16
12. Safety Testing	12	17. User Operating Controls	17
12.1 Test the Close Cycle	12	18. Door Status Indicators	17
12.2 Testing the Open Cycle	12	19. Specifications	18
12.3 Test the Manual Door Operation	12	20. Troubleshooting	19
12.4 Adjusting Safety Obstruction Force	12	21. After Installation Care	22
12.5 To Increase Force Pressure	12	21.1 Service Checklist	21
12.6 To Decrease Force Pressure	12	21.2 Battery Replacement	22
12.7 To Recall Factory Set Force	12	21.3 Battery Disposal	22
12.8 To Recalculate Force Margins	12	21.4 Warranty	22
13. Control Board & Accessories	13		
13.1 Control Board Layout	13		
13.2 Auxiliary Output	13		

WARNING! IMPORTANT SAFETY INSTRUCTIONS

FOLLOW ALL INSTRUCTIONS SINCE INCORRECT INSTALLATION CAN LEAD TO SEVERE INJURY.

- before installing the drive, remove all unnecessary ropes or chains and disable any equipment, such as locks, not needed for powered operation;
- before installing the drive, check that the door is in good mechanical condition, correctly balanced and opens and closes properly;
- install the actuating member for the manual release at a height less than 1,8 m;
- install any fixed control at a height of at least 1,5 m and within sight of the door but away from moving parts;
- permanently fix the labels warning against entrapment in a prominent place or near any fixed controls;
- permanently fix the label concerning the manual release adjacent to its actuating member;
- after installation, ensure that the mechanism is properly adjusted and that the drive reverses when the door contacts a 40 mm high object placed on the floor.
- necessary information for the safe handling of a drive weighing more than 20 kg. This information shall describe how to use the handling means, such as hooks and ropes;
- the drive must not be used with a door incorporating a wicket door (unless the drive cannot be operated with the wicket door open);
- after installation, ensure that parts of the door do not extend over public footpaths or roads.
- vertical doors and gates need an anti-drop feature or device;
- information if a hazardous part of the drive is intended to be installed at a height of at least 2.5 m above floor level or other access level;
- except for horizontally moving pedestrian doors, ensure that entrapment due to the opening movement of the driven part is avoided

1. Installation Safety Warnings!

This automatic garage door opener is designed and tested to offer safe service provided it is installed and operated in strict accordance with the following safety warnings. Failure to comply with the following instructions may result in death, serious personal injury or property damage.



WARNING!

- The door may operate unexpectedly, therefore do not allow anything to stay in the path of the door.
- When operating the manual release while the door is open, the door may fall rapidly due to weak or broken springs, or due to being improperly balanced.
- The drive must not be used with a door incorporating a wicket door, unless the drive cannot be operated with the wicket door open.
- The drive is intended to be installed at least 2.5m above the floor.
- Do not disengage the opener to manual operation with children/persons or any objects including motor vehicles within the doorway.
- If the door is closing and is unable to re-open when obstructed, discontinue use. Do not use a door with faulty obstruction sensing
- When using auto close mode, a Photo Electric beam must be fitted correctly and tested for operation at regular intervals. Extreme caution is recommended when using auto close mode. All safety rules must be followed.



ELECTROCUTION!

- Place opener in protected area so that it does not get wet.
- Do not spray with water .
- Disconnect the power cord from mains power before making any repairs or removing covers. Only experienced service personnel should remove covers from the opener.
- If the power supply cord is damaged, it must be replaced by an Automatic Technology service agent or suitably qualified person.
- Connect the opener to a properly earthed general purpose 240V mains power outlet installed by a qualified electrical contractor.



CAUTION:

Emergency Access

Muscular strain

Fall from ladder

Crush injury from unsecured door

Garage Door

Entanglement

Entrapment under operating door

- If garage has no pedestrian entrance door, an emergency access device should be installed. This accessory allows manual operation of the garage door from outside in case of power failure.
- Practice correct lifting techniques (carton weighs approx 9kgs)
- Practice correct lifting techniques when required to lift the door as per installation instructions.
- Ensure ladder is the correct type for job.
- Ensure ladder is on flat firm ground that will take the weight without the legs sinking.
- Ensure user has 3 points of contact while on ladder.
- Place a 2 metre exclusion zone around area under the door while it is unsecured.
- Follow the installation instructions
- Examine the door installation, in particular, springs and mountings for signs of wear, damage and imbalance.
- The garage door must be well balanced. Sticking or binding doors must be repaired by a qualified garage door installer prior to installation of the opener.
- Remove or disengage all garage door locks and mechanisms prior to installation of the opener.
- Never plug in and operate opener prior to installation.
- Keep hands and loose clothing clear of door and guides at all times.
- DO NOT operate the opener unless the garage door is in full view and free from objects such as cars and children/people. Make sure that the door has finished moving before entering or leaving the garage
- In order for the opener to sense an object obstructing the door way, some force must be exerted on the object. As a result the object, door and/or person may suffer minor damage or injury.
- Ensure the garage door is in good working order by undertaking regular servicing.
- Install the optional wall transmitter in a location where the garage door is visible, but out of the reach of children at a height of at least 1.5m.
- Photo Electric beams must be installed if the closing force at the bottom edge of the door exceeds 400N (40kg)



1. Home Owner Safety Warnings!

This automatic garage door opener is designed and tested to offer safe service provided it is installed and operated in strict accordance with the following safety warnings. Failure to comply with the following instructions may result in death, serious personal injury or property damage.

WARNING! IMPORTANT SAFETY INSTRUCTIONS

IT IS IMPORTANT FOR THE SAFETY OF PERSONS TO FOLLOW ALL INSTRUCTIONS.

SAVE THESE INSTRUCTIONS



WARNING!

- Details on how to use manual release. When operating the manual release while the door is open, the door may fall rapidly due to weak or broken springs, or due to being improperly balanced.
- **DO NOT** disengage the opener to manual operation with children/persons or any objects including motor vehicles within the doorway.
- If the door is closing and does not re-open when obstructed, discontinue use. **DO NOT** use a door with faulty obstruction sensing.
- Frequently examine the installation, in particular check cables, springs and mountings for signs of wear, damage or imbalance. **DO NOT** use if repair or adjustment is needed since fault in the installation or an incorrectly balanced door may cause injury.



ELECTROCUTION!

- Place opener in protected area so that it does not get wet.
- **DO NOT** spray with water .
- **DO NOT** open the protective covers.
- **DO NOT** operate opener if cable is damaged. It must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Disconnect the supply(s) when cleaning or other maintenance is being carried out.



DO NOT DO IT YOURSELF

- Keep the garage door balanced. Sticking or binding doors must be repaired. Garage doors, door springs, brackets and their hardware are under extreme tension and can cause serious personal injury. **DO NOT** attempt any garage door adjustment. **DO NOT** use if repair or adjustment is needed. Call for a professional garage door service.



BATTERY WARNING!

- This product contains a lithium button/coin cell battery in the transmitters. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, **SEEK IMMEDIATE MEDICAL ATTENTION.**



CAUTION:

Emergency access

Entrapment under operating door

Fall from Ladder

Entanglement in or laceration from moving door

- If your garage has no pedestrian entrance door, an emergency access device should be installed. This accessory allows manual operation of the garage door from outside in case of power failure.
- Watch the moving door and keep people away until the door is completely opened or closed. **DO NOT** operate door when persons are near the door.
- **DO NOT** allow children to play with door controls or transmitters. Keep remote controls away from children.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- Regularly conduct Open and Close cycle testing.
- Each month check that the drive reverses when the door contacts a 40mm high object placed on the floor. Adjust if necessary and recheck since an incorrect adjustment may present a hazard.
- Ensure the garage door is in good working order by undertaking regular servicing.
- Wall transmitters should be installed in a location where the garage door is visible, but out of the reach of children at a height of at least 1.5m.
- Install Safety Beams (recommended).
- Ensure ladder is the correct type for the job.
- Ensure ladder is on flat ground.
- Ensure user has 3 points of contact while on ladder.
- Keep hands and loose clothing clear of door and guides at all times.
- Keep hands clear of moving door as sharp edges can cause cuts or lacerations.


2. Before you Begin

2.1 Examine the conditions in the garage:

- a. Look at the ceiling:
 - i. Is it plastered? The opener is mounted to a perforated angle which **MUST** be securely fastened to a structural support. You will need to locate the structural beams in the ceiling which are generally 400mm apart.
 - ii. does it have exposed beams? The opener is mounted to a perforated angle which must be securely fastened to a structural support like the exposed beams. You may need to install a 40mm thick board (not supplied) between structural supports.
- b. Look at the wall above the garage door.
 - i. Is it brick? The wall bracket **MUST** be securely fastened to the wall with suitable screws and ensure it does not move.
 - ii. Is it timber? The wall bracket **MUST** be securely fastened to a structural support. You may need to install a 40mm thick board (not supplied) between structural supports to fasten the wall bracket to.


2.2 Test the following before commencing installation:

- a. The door **MUST BE** in good operating condition.
 - Manually move the door up and down, the door should move freely without binding or sticking.
- b. The maximum force required to move the door should not exceed 20kg.
- c. Lift the door to about halfway. When released, the door should stay in place.

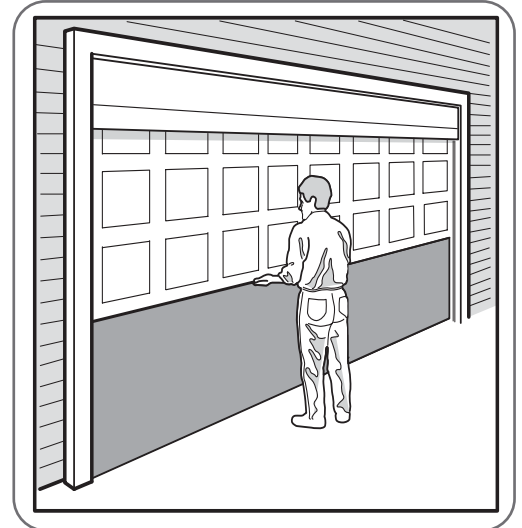


DO NOT DO IT YOURSELF:
 If any of the above door requirements are not met, **DO NOT** attempt to fix yourself. Please contact a garage door professional. (P) 1300 133 944

3. Tools Required

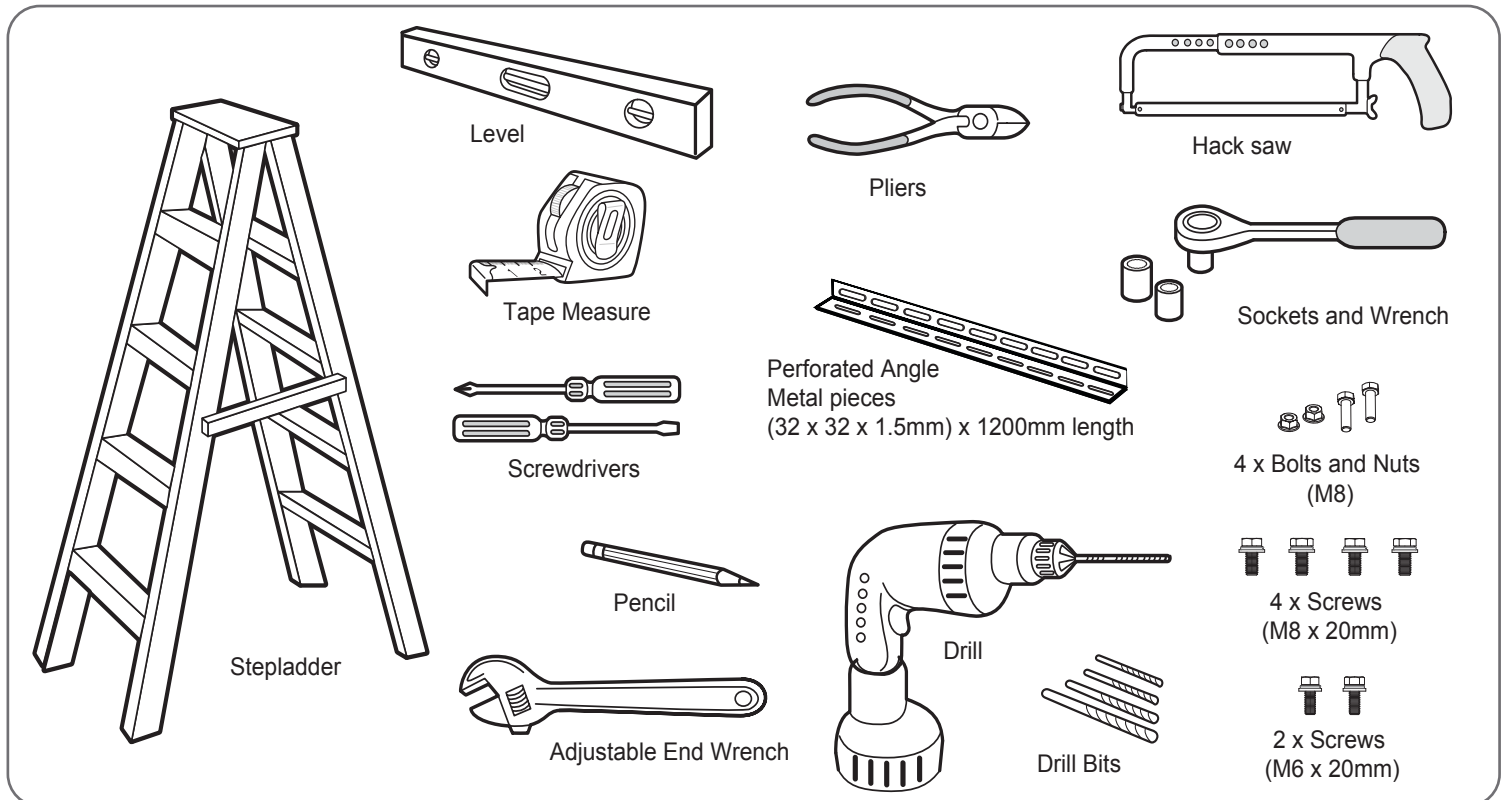

4. Kit Contents

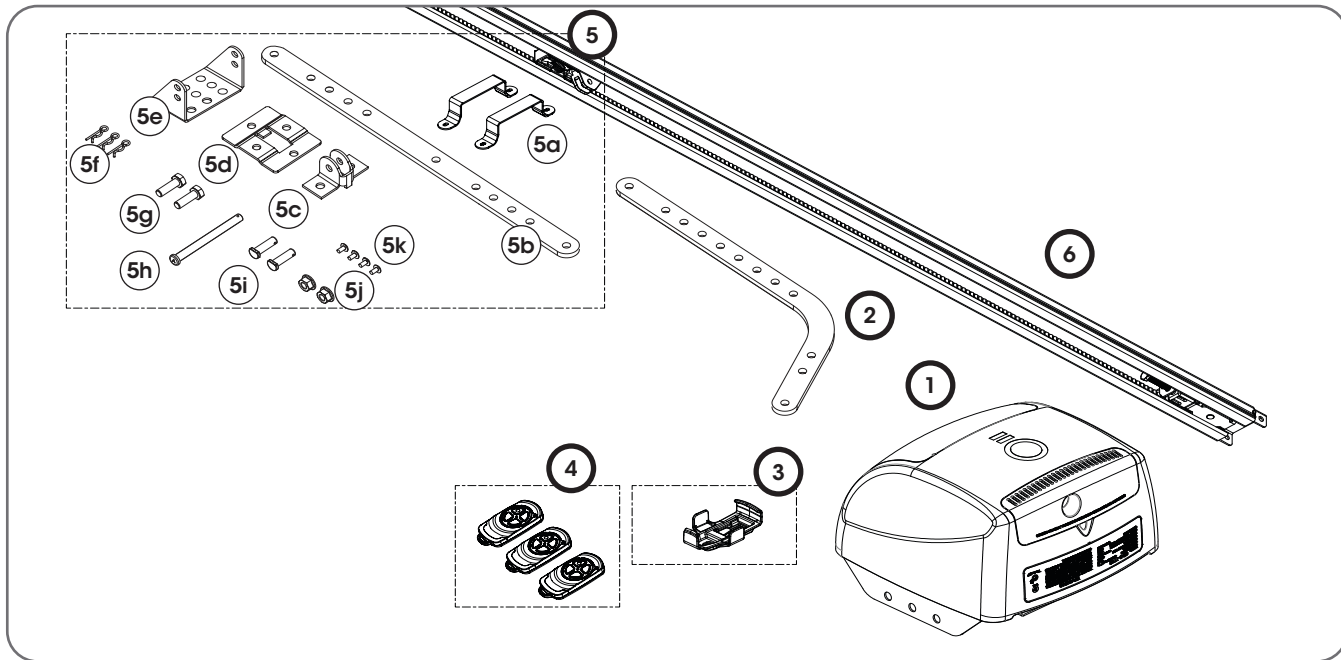


1. 1 x GDO-11 drive unit
 2. 1 x Bent arm door attachment
 3. 1 x Transmitter Holder
 4. 3 x Transmitters
- PLUS
5. 1 x Track Hardware Kit
 6. 1 x Pre-Assembled track

5. Position

5.1 The Opener:



- MUST BE installed in a dry position, protected from weather.
- REQUIRES properly earthed 3 pin single phase power on the ceiling within an arms length of the opener.
- Requires a **MINIMUM HEADROOM** of 57mm between the highest point of the door's travel and the ceiling.
- Use the diagram below as a reference when completing the installation.

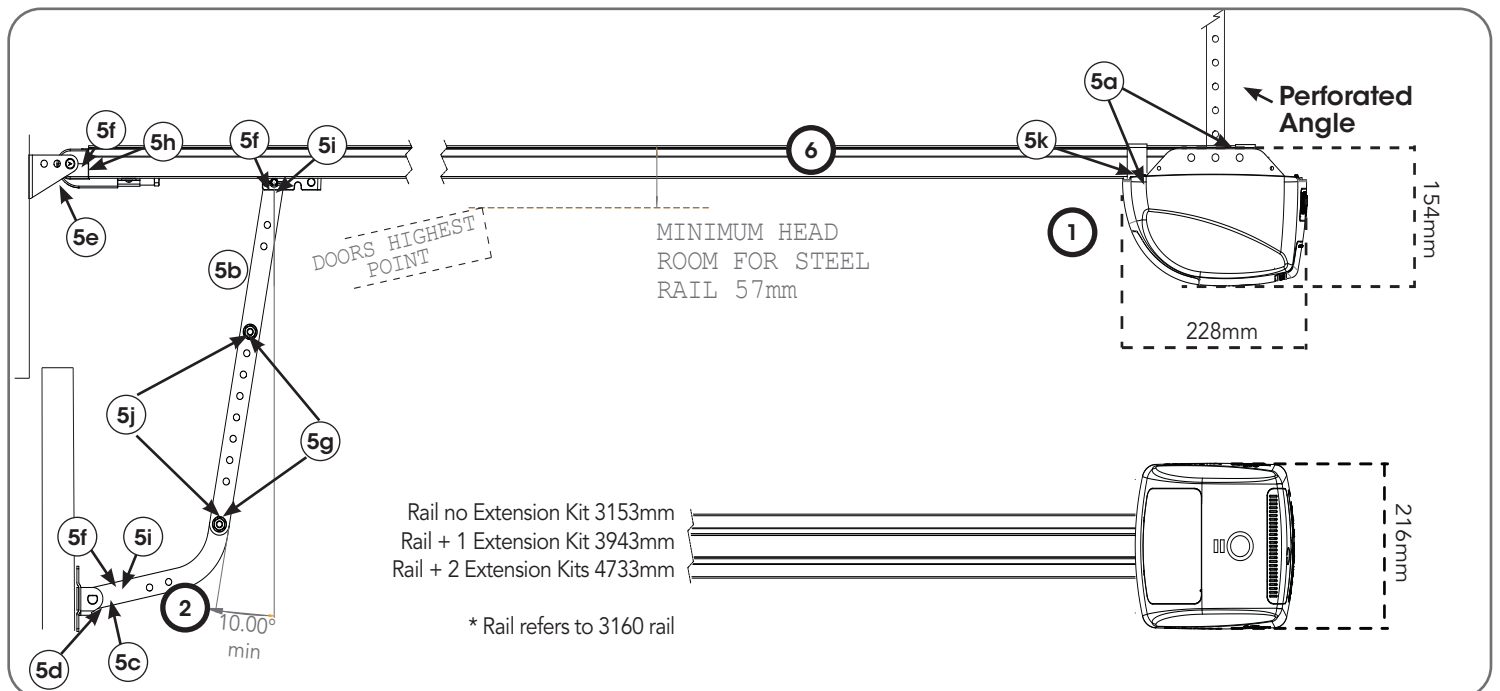

6. Fit the Opener

6.1 Secure C-Rail to Opener:

- Remove the Opener from the box.
- Locate and insert the shaft of drive unit (1) into the C-Rail's sprocket.
- Fix the two track brackets (5a) with four (4) M4 x 8 screws (5k) supplied in accessory pack.
- Place drive unit back in packing box for protection.

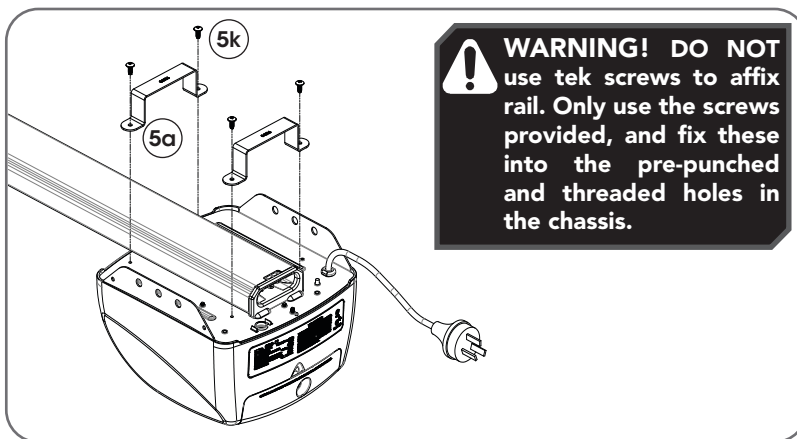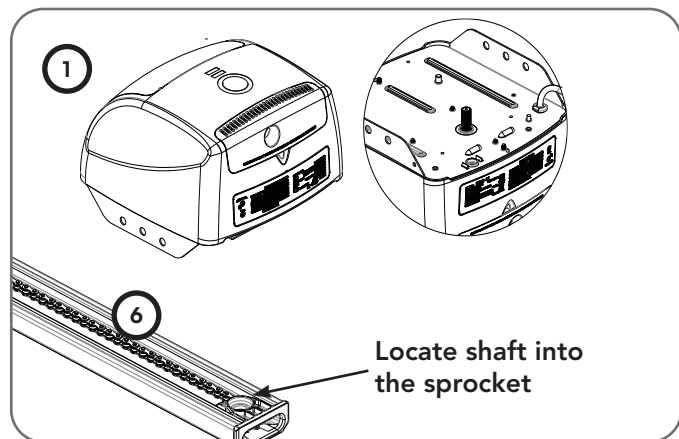

7. Bracket Position


7.1 Wall Bracket Position:

- Determine the centre of the door and mark this point with a line on the wall above.
- Raise the door and find the highest point of travel of the first (top) door panel.



WARNING! The Opener must be securely fastened to structural supports, otherwise opener failure may ensue causing serious personal injury and / or property damage.


- Using step ladder and a level, transfer this height to the wall above the door and mark a line 60mm above it, across the centre line.

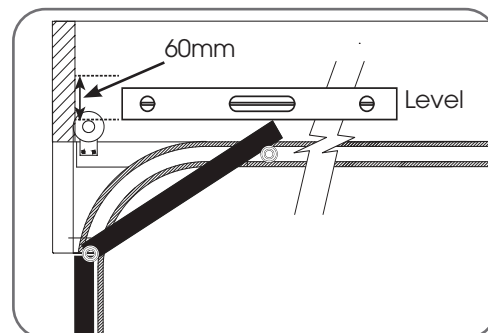

DO NOT DO IT YOURSELF: If sufficient structural support can not be found, contact a door professional for installation.


7.2 Mounting the Wall Bracket:

- Draw two lines extending 21.5mm from each side of the centre point.
- Centre the wall bracket (5e) over the intersection of these two lines. Mark centres for at least two holes and ensure it is into a solid mounting point.
- Drill holes in the wall with an appropriate bit.
- Secure to the wall using:
 - IF CONCRETE OR BRICK:
8mm (5/6") loxins/dynabolts.
 - IF TIMBER:
wood screw #20 or similar (min. 50mm).

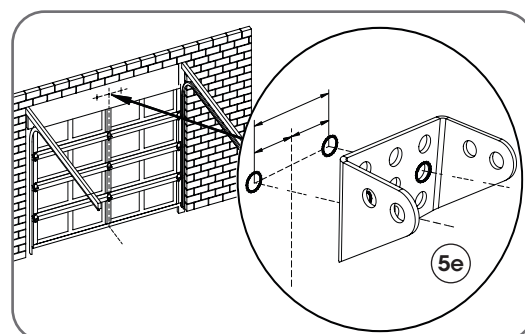

7.3 Attach the Track to the Wall Bracket


- Leave the drive unit in its packing box on the floor for protection and lift the other end of the C-Rail.
- Attach the pre-assembled track (6) to the wall bracket (5e) with the 90mm long pin (5h) and secure with the supplied pin snap (5f).

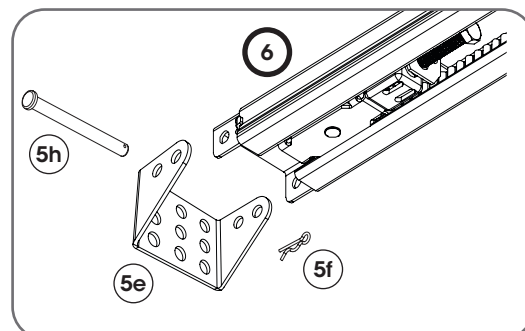


8. Perforated Angle (Not supplied)

8.1 Attach Perforated Angle (not supplied) or equivalent

- Measure across the ceiling from the centre point 3177mm (+/- 150mm) to find a supporting beam.
- Create a perforated angle which best suits your site. Use a hack saw to cut the L shape metal strips. Secure the perforated angle to a supporting beam using diagrams shown below.
- Raise the drive unit to the ceiling mounted perforated angle and secure with M8x20mm screws and nuts (not supplied). Strips should not extend more than 18mm below centre of drive unit mounting holes.
- To prevent moisture on the C-rail running into the powerhead it is recommended a strip of silicon sealant is placed across the top of the C-rail just before the opener.

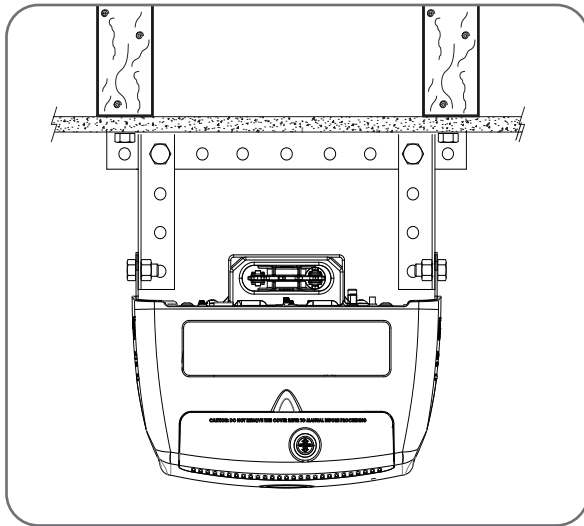

Ceiling Beams that run towards the door requires:
1 x perforated L shape metal strip and
2 x shorter perforate L shape metal drop down strips..

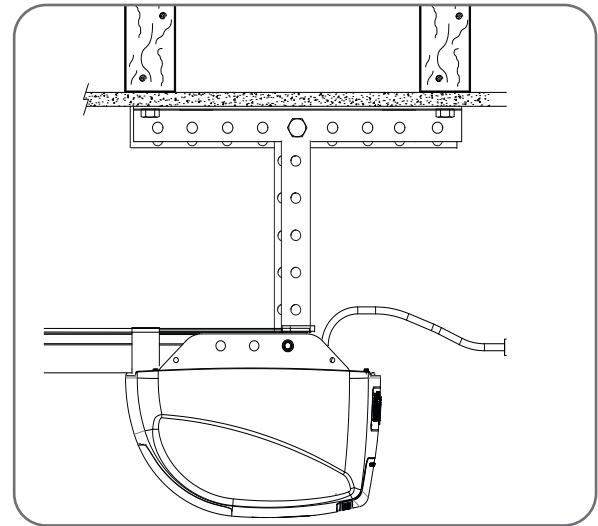


Ceiling Beams that run parallel to the door requires:
2 x perforated L shape metal strips and
2 x shorter perforate L shape metal drop down strips..

WARNING! The perforated angle **MUST** be securely fastened to a structural support.
The installer **MUST** select and use fasteners appropriate to the material into which they are being fixed.

8.2 Alternative Mounting Option

(for One piece door without track (Tilt Door / J-Type))

The opener can be fastened to the roof by driving a bolt through the C-Rail into a structural timber support. The bolt head's height must not exceed 6mm.

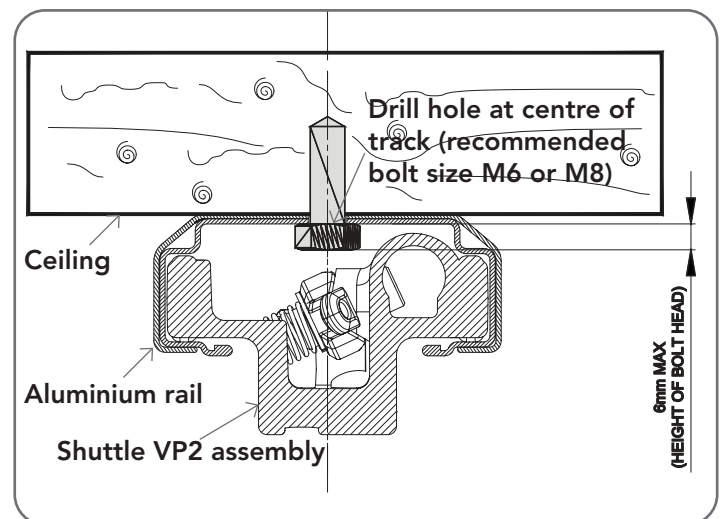


9. Mounting Brackets and Arms

9.1 Mounting the Door Bracket:

- The door bracket locator (5d) is placed over the door bracket (5c), on the door's centre line one-third down the top panel and mounted using M6 or equivalent screws (not supplied),
- STEEL DOORS ONLY: Bracket can be welded in place.


NOTE: If in doubt about the door's strength, reinforcement may be added to the door's frame where necessary. Door damage may occur if the bracket is installed on a panel with insufficient strength. The opener's warranty does not cover damage caused to the door and/or door panels.

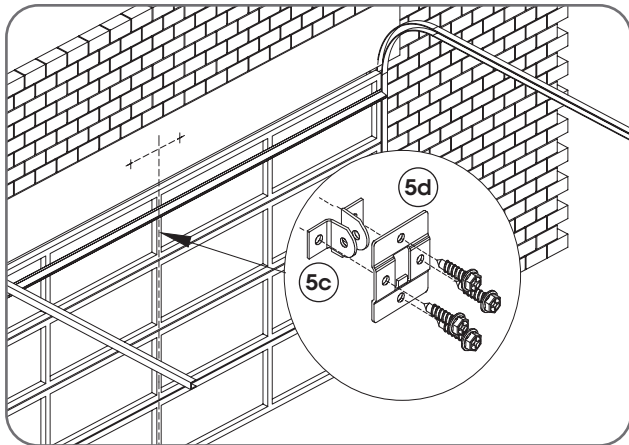

9.2 Attaching the Arms

- Assemble the bent arm (2) (connecting to the door) to the right side of the straight arm (5b) with bolts (5g) and nuts (5j). Connect the straight arm (5b) to the shuttle with a clevis pin (5i) and a pin snap (5f). Always use both bent and straight arms.
- Connect the assembled arm to the bracket with clevis pin (5i) and pin snap (5f). The angle "A" must be more than 10°.

tip For J-Type doors: Refer to Appendix G for attaching arms

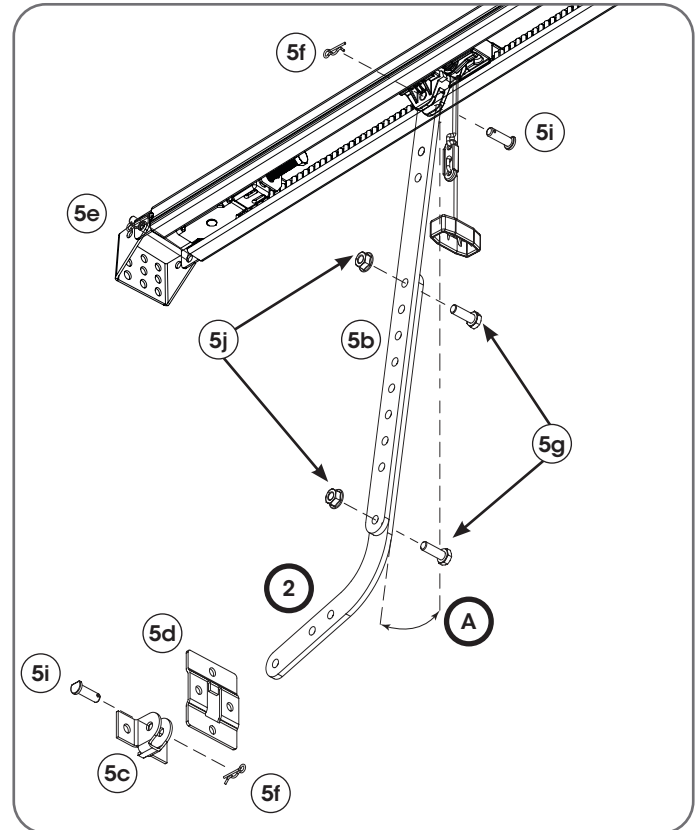

10. Connect to Power


10.1 Initial Preparation:

- Swing open the controls cover to gain the access to the controls panel and swing back into its position when setup is completed.
- Engage the C-Rail's trolley (attached to the door via the arms) with the chain index by moving the door.
- If the trolley does not "click" firmly onto the chain index, ensure that the manual release cord is not in the disengaged position by pulling it backwards.

NOTE: This cover has a label that says "Do not remove" however, this only applies during normal operation. This cover must be removed to setup the opener. Remove the button cover with a blade screwdriver.

- Switch power on to the opener. The red CLOSE LIMIT LED will be flashing.
- Press and hold the MINUS (-) button - the door should start closing. If door starts to close, release button.

NOTE: If the door opens, release the MINUS (-) button and press the OPERATE button once to change the motor's direction.

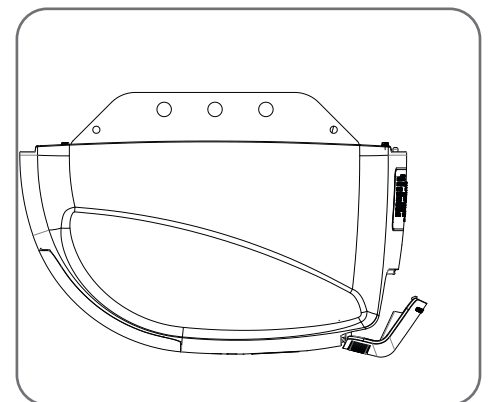

11. Setting Limits

11.1 Setting the Datum:

- Press and hold the MINUS (-) or PLUS (+) buttons to move the door to the halfway position. Ensure that the door, shuttle and chain index are engaged.
- Using a small blade screw driver turn the datum adjust screw slowly until the yellow status LED just illuminates.

! WARNING! The safety obstruction detection system is inoperable while MINUS (-) and PLUS (+) drive buttons are being used and travels limits are not set.

NOTE: If the status LED is already illuminated when power is connected then turn the datum adjust screw until the LED goes off then turn back one notch to illuminate again.



11.2 Set the Limit Positions:



When setting the Close limit, ensure the position is when the door makes first contact with the ground. Alternatively for the Open limit the position should be at the height of the garage opening.

STEP ONE	STEP TWO
 Switch power on	 To move the door to the halfway point.

CLOSE LIMIT POSITION	
STEP ONE	STEP TWO
 HOLD Press to close door RELEASE	 When door near close, single presses inch door CLOSE limit should be when rubber strip touches the ground

! WARNING! In setting the close limit position, do not force the door into the floor with excessive force, as this can interfere with the ease of operation of the manual release mechanism.

STEP THREE		
If door overshoots Press	> Press to position	> Press to set

OPEN LIMIT POSITION	
STEP ONE	STEP TWO
 HOLD Press to close door RELEASE	 When door near open, single presses inch door OPEN limit should be the height of the garage opening

! WARNING! The door will automatically close, open and close again after the next step. Ensure that nothing is in the door's path.

STEP THREE		
If door overshoots Press	> Press to position	> Press to set



NOTE: If unhappy with the positions set, restart the procedure by resetting the door limit positions as per below.

11.3 Clearing the Door Limit Positions:

CLEARING THE DOOR LIMIT POSITIONS

STEP ONE	STEP TWO
Remove controls cover	
STEP THREE	
 Release	<p style="background-color: black; color: white; padding: 5px;">NOTE: No action taken within 30 secs, the opener returns to original settings.</p> <p style="text-align: center;">Now set Close & Open limits</p>

11.4 Re-profiling the Door:

tip Re-profiling is a simple way of re-learning the travel characteristics of a previously setup Limit Switch travel. Re-profiling is used when travel characteristic change due to mechanical adjustments.

To initiate a re-profile: LIMITS must already be set.

STEP ONE	
Remove controls cover	
STEP TWO	STEP THREE
 Door will open and close several times	 Then refit controls cover opener beeps once

11.5 Controller memory reset:

tip If limits are already set, clear limits first by following Clearing the door limit positions and then follow below.

STEP ONE	STEP TWO
 Switch power OFF	

This will cause all control memory to be set to factory defaults EXCLUDING: transmitters, history log and cycle counters.

11.6 Setting the PET (Pedestrian Mode) position:

tip When activated, PET mode drives the door to a preset position from the close position, therefore allowing a pet or parcel to go under the door.

STEP ONE	STEP TWO
 Close to desired position	Remove controls cover
STEP THREE	
STEP FOUR	
 Release	Refit controls cover Proceed to Storing the transmitter Code to code a remote button to PET Mode

12. Safety Testing

12.1 Test the Close Cycle

- Press the OPERATE button to open the door.
- If the door closes, press the OPERATE button to stop the door, then press OPERATE again to open.
- Place a piece of timber approximately 40mm high (or the openers cardboard box) on the floor directly under the door.
- Press the OPERATE button to close door.
- The door should strike the object and re-open.
- Remove the timber or cardboard box.

WARNING! If the door is closing and is unable to re-open when obstructed, discontinue use. Do not use a door with faulty obstruction sensing.

12.2 Testing the Open Cycle

- Press the OPERATE button to close the door.
 - Press OPERATE again to open the door.
 - When the door reaches approximately half way, firmly grab the door's bottom rail - the door should stop.
- If the door does not reverse readily when closing, or stop when opening, put the door into manual by pulling down on the manual release string to disengage the motor and contact 1300 133 924 for support.

12.3 Test the Manual Door Operation

Periodically disengage the opener and manually operate the door. The door must be smooth to operate by hand. The force required on the bottom rail should not exceed 20kg.

12.4 Adjusting Safety Obstruction Force

The Safety Obstruction Force is calculated automatically during setup. Adjusting this is normally only necessitated by environmental conditions such as windy or dusty areas, and areas with extreme temperature changes.

12.5 To Increase Force Pressure


- Hold down the FORCE MARGIN SET button.
- While holding the FORCE MARGIN SET button, press the PLUS (+) button. Each press will increase the force margin.
- The OPEN LIMIT LED will flash each time the PLUS (+) button is pressed to indicate an increase in force.
- If the OPEN LIMIT LED flashes continuously when the PLUS (+) button is being pressed, this indicates that the maximum force setting has been reached.
- Test the force again as per Testing Close Cycle and Testing Open Cycle.

12.6 To Decrease Force Pressure


- Hold down the FORCE MARGIN SET button.
- While holding the FORCE MARGIN SET button, press the MINUS (-) button. Each press will decrease the force margin.
- The CLOSE LIMIT LED will flash each time the MINUS (-) button is pressed to indicate a decrease in force.
- If the CLOSE LIMIT LED flashes continuously when the MINUS (-) button is being pressed, this indicates that the minimum force setting has been reached.
- Test the force again as per Testing Close Cycle and Testing Open Cycle.



CAUTION: Take care when completing a safety test. Failure to follow this warning can result in serious personal injury and/or property damage.

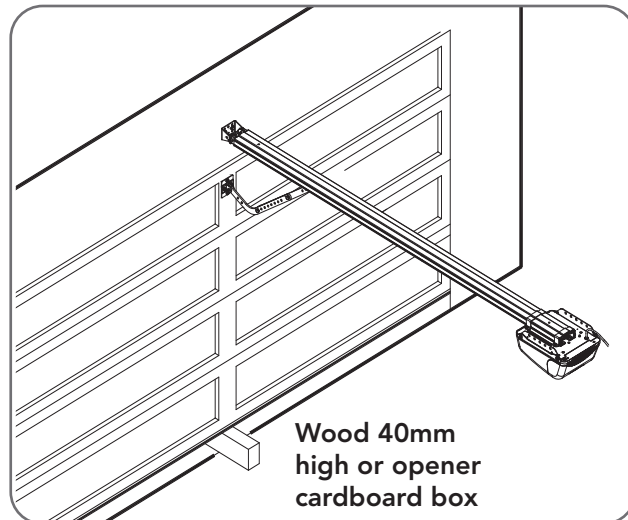

WARNING! If the door fails these tests, put the opener into manual mode, only operate the door by hand and call for service.

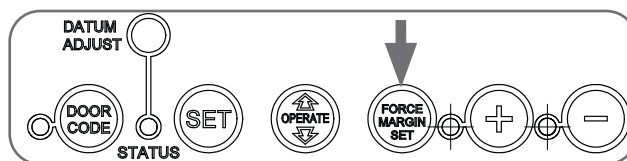

12.7 To Recall Factory Set Force

- Holding down the FORCE MARGIN SET button and the SET button for two seconds.
- Release both buttons. The default setting should now be recalled.

12.8 To Recalculate Force Margins

- Press and hold the FORCE MARGIN SET Button for six (6) seconds, the beeper will sound once.
- The door will start to move and re-calculate force margins. The door can move between the open and close limit positions up to four (4) times (depending on the position of the door and the power up condition).
- A single beep will be heard once the process is complete.
- Test the force again as per Testing Close Cycle and Testing Open Cycle.




13. Control Board & Accessories

13.1 Control Board Layout


To access the control board:

- a. Remove the back cover by unscrewing the two (2) screws.
- b. Refer to below diagram.

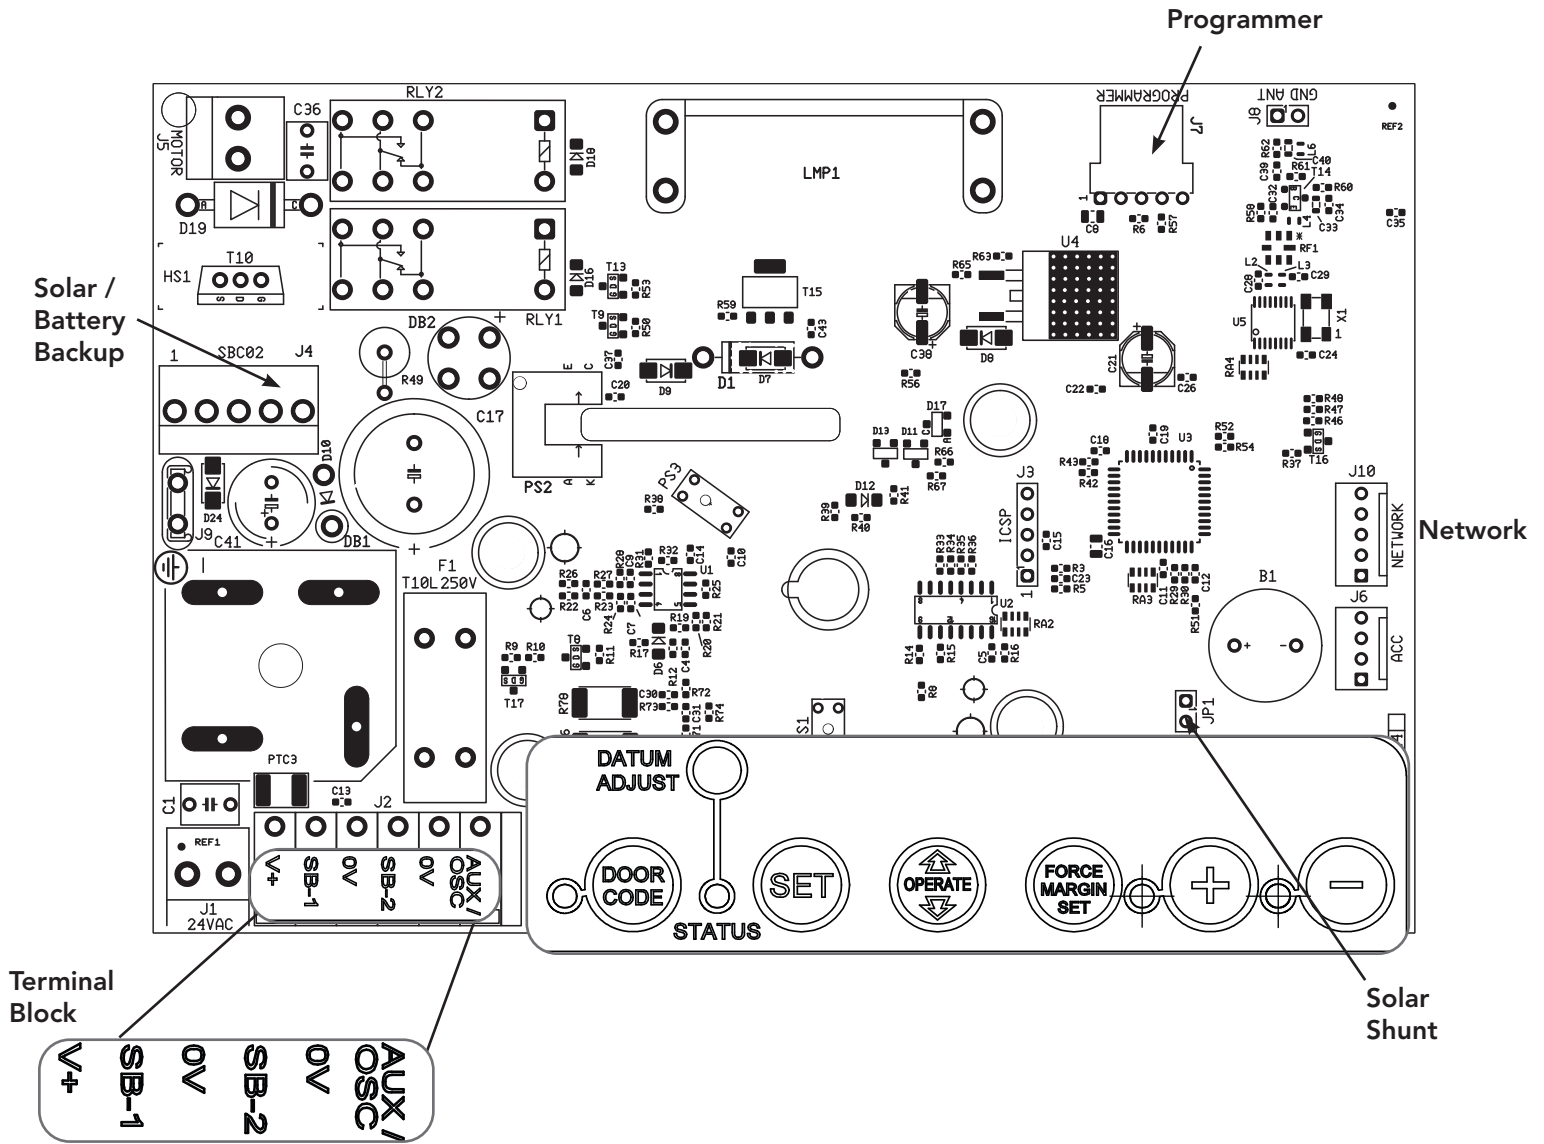

13.2 Auxiliary Output

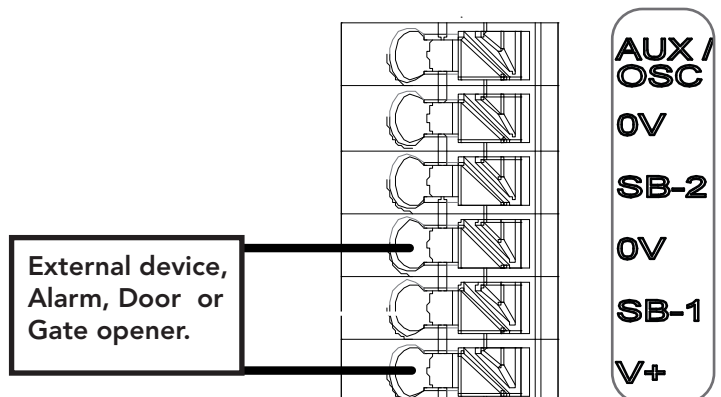


The auxiliary output can be used to control alarm or another garage door opener. A valid transmission from the pre-coded transmitter will cause the auxiliary output to pulse for approximately 1 (one) second. The maximum DC voltage must not exceed 35 volts DC. Maximum current must not exceed 80 ma.



14. Coding a Transmitter





14.1 Storing the Transmitter Code

! tip The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.





STEP ONE	STEP TWO
 <p>HOLD Opener beeps</p>  <p>HOLD for 3 sec RELEASE HOLD for 3 sec Release both buttons</p>	 <p>Press to test</p>

14.2 Remotely Coding Transmitters

! tip Remotely coding works when you have a pre-coded remote control and are in range of the opener.

STEP ONE	STEP TWO
 <p>Take a pre-coded remote and press the button to duplicate</p>	 <p>Use a pen, HOLD for 2 sec the middle button through the coding hole</p>
STEP THREE	STEP FOUR
<p>Opener flashes & beeps</p>  <p>Take new remote</p> <p>HOLD for 3 sec RELEASE HOLD for 3 sec RELEASE</p>	<p>Opener stops flashing & beeping</p>  <p>Press to test</p>

14.3 Vacation Mode

STEP ONE	STEP TWO
Remove controls cover	 <p>Press once</p>
STEP THREE	
 <p>HOLD Opener beeps 2 times</p>	 <p>HOLD for 3 sec RELEASE HOLD for 3 sec Release all buttons</p>
STEP FOUR	STEP FIVE
Then refit controls cover	<p>Turn on Turn off</p>  <p>HOLD for 4 sec RELEASE</p> <p>Press, then try another</p>





TRANSMITTER FUNCTION	BUTTON		
	DOOR CODE		DOOR CODE
Open / Stop / Close	HOLD		
Vacation Mode	Press once	+	HOLD on second
Aux Output	Press twice	+	HOLD on third
PET (Pedestrian) Mode	Press three times	+	HOLD on fourth
Courtesy Light	Press four times	+	HOLD on fifth

* The button coded for open only function can close the door if you hold the button for 4 seconds, when the door is fully open.

! tip Remote code set is disabled when:





- powered by battery backup
- the service indicator is active
- when the door is indicating that it was prevented from closing by a P.E beam being blocked

14.4 Aux Output





STEP ONE	STEP TWO
Remove controls cover	 <p>Press twice</p>
STEP THREE	
 <p>HOLD Opener beeps 3 times</p>	 <p>HOLD for 3 sec RELEASE HOLD for 3 sec Release all buttons</p>
STEP FOUR	STEP FIVE
Then refit controls cover	 <p>Press to test</p>

14. Coding a Transmitter





14.5 PET (Pedestrian) Mode

STEP ONE	STEP TWO
Remove controls cover	 Press three times
STEP THREE	
 HOLD Opener beeps 4 times	 HOLD for 3 sec RELEASE HOLD for 3 sec Release all buttons
STEP FOUR	STEP FIVE
Then refit controls cover	 Press to test


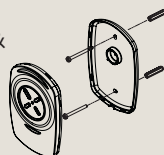
14.6 Courtesy Light

STEP ONE	STEP TWO
Remove controls cover	 Press four times
STEP THREE	
 HOLD Opener beeps 5 times	 HOLD for 3 sec RELEASE HOLD for 3 sec Release all buttons
STEP FOUR	STEP FIVE
Then refit controls cover	 Press to test

14.7 Erasing All Transmitter Codes

STEP ONE	STEP TWO
Remove controls cover	 HOLD Turn power ON
STEP THREE	
 These LED's will illuminate for 5 secs then go out	
STEP FOUR	STEP FIVE
 Release button when light turns on	ALL stored codes deleted  Test by pressing a remote Refit controls cover

14.8 Installing Optional Wall Mounted Transmitter

STEP ONE	STEP TWO
Remove controls cover	 HOLD Opener beeps HOLD for 3 sec RELEASE HOLD for 3 sec Release both buttons
STEP THREE	STEP FOUR
Then refit controls cover	Mount in view of door, away from children & at least 1.5m above floor. 



15. Opener Safety & Security

15.1 Your Door CAN NOT be used by the opener when:

- There is a locking device installed.
- There is a power failure.


15.2 Your Door CAN be used when:

- There is an emergency, by disengaging the opener.
- There is a power failure, by disengaging the opener.

15.3 To Disengage the Opener:



It is recommended to disengage the door with the door in the closed position.

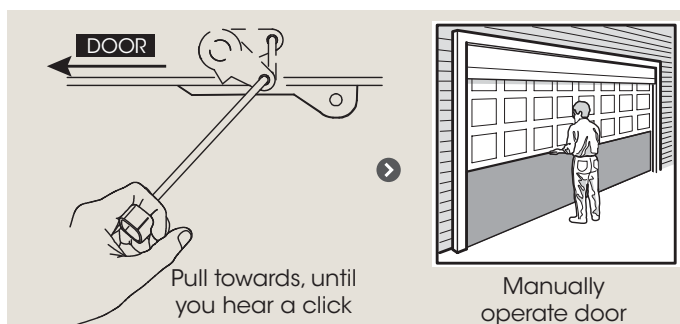


CAUTION: When the opener is manually disengaged, the door is no longer locked. To lock the door manually, re-engage the opener after the door is closed.



WARNING! When operating the manual release (while the door is open) the door may fall rapidly due to weak or broken springs, or due to being improperly balanced.

Do not disengage the opener to manual operation with children/persons or any objects including motor vehicles within the doorway.

15.4 To Re-Engage the Opener:

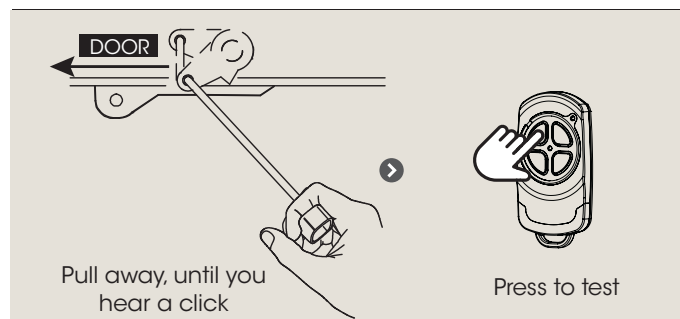


CAUTION: Do not use the string handle as a mechanism to open the door. Failure to comply may cause serious injury.

16. Operating your Opener


16.1 To Operate the opener:

- Press the programmed transmitter button until your door begins to move (usually 2 seconds). Make sure you can see the door when you use the transmitter.
- If you are in a vehicle you should aim the transmitter through your windscreen as shown.
- Check that the door is fully open or closed before you drive in or away.
- If you press the transmitter whilst the door is moving the door will stop. The next press of the transmitter will move the door in the opposite direction.

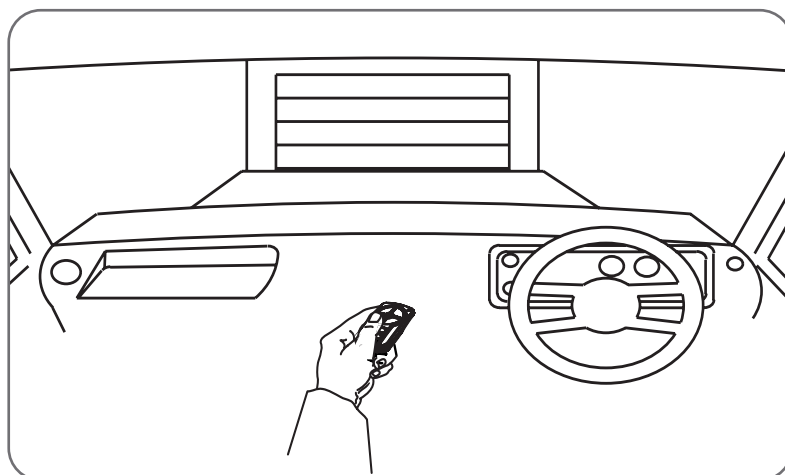

17. User Operating Controls

Button	Function
1. OPERATE	Opens/stops/closes the door
2. CODING LED (Red)	Flashes when a code is being stored or when the transmitter button is pressed
3. DOOR CODE (Blue)	Is used for storing or erasing transmitter buttons for door operation
4. DOOR STATUS LED (Yellow)	Illuminates when Service is due.
5. OPEN LED (Green)	Illuminates and flashes as the door opens and remains on when the open limit position has been reached.
6. CLOSE LED (Red)	Illuminates and flashes as the door opens closes, and remains on when the close limit position has been reached.
7. SET (Orange)	Is used during installation. The SET button is also used to program the PET (Pedestrian) position and to re-initialise the opener.

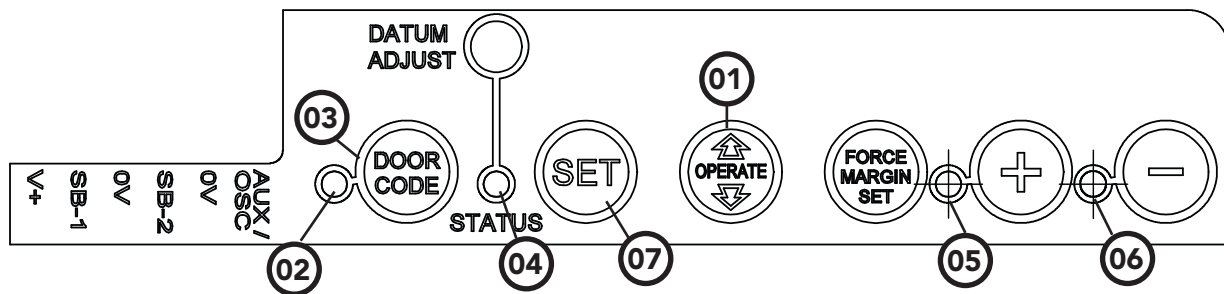

18. Door Status Indicators

Door Status Indicators	OPEN LED (green)	CLOSE LED (red)	Beeper
Open	On		
Close		On	
Opening	Flashing		
Closing		Flashing	
Door travel stopped	Flashing	Flashing	
Door obstructed when opening	Flashing		Beeps while door is moving
Door obstructed when closing		Flashing	Beeps while door is moving
Opener overloaded	Alternating flashes	Alternating flashes	
Mains power interrupted	Rapid flashes		



19. Specifications

Technical Specifications	GDO-11V3 Ero™
Power supply	230V - 240V 50Hz
Maximum door opening: Door Height (standard rail): Maximum Door Weight: Door Area:	2440mm 110kg 16.5m ²
Door must be well balanced and able to be operated by hand, as per warranty conditions and AS/NZS 4505:2012	
Rail headroom	25mm
Minimum headroom	57mm
Short Term Peak force	650N
Rated force	400N (40kg)
Nominal force	150N (15kg)
Receiver type	Multi-frequency UHF FM (433.47, 433.92 & 434.37MHz)
Receiver code storage capacity	8 X Triocode™128 4-button Transmitters
Coding System	TrioCode™ 128 Type
Coding type	Non-linear encryption algorithm
Number of code combinations	Over 100 billion random codes
Transmitter battery	CR2032 (3 Volts)
Courtesy light	Festoon style lamp 24volts 15 watts
Network connectivity	Network compatible, (requires optional Smart Phone Control Kit)

Note: Intermittent operations may occur in areas which experience very strong winds. The strong wind puts extra pressure on the door and tracks which may in turn intermittently trigger the safety obstruction detection system.



20. Troubleshooting

Symptom	Possible cause	Remedy
The opener does not work from the transmitter	Garage door in poor condition e.g. springs may be broken	Check the door's operation
	The opener does not have power	Plug a device of similar voltage (e.g. a hairdryer) into the power point and check that it is OK
	The battery in the transmitter is flat	Replace the battery
	Transmitter does not contain TrioCode™ 128 Technology	Check that the transmitter has grey buttons and the model number on the back displays V2. Contact dealer for support if otherwise.
	The opener has been put into "Vacation Mode"	Turn off "Vacation Mode" (Section 14)
	The transmitter button is not programmed to operate the door.	Code in the transmitter
One transmitter works but the other/s do not	Door Code LED is flashing yet the opener is not working.	Ensure the correct button on the transmitter is being pressed.
	Faulty transmitter	Replace transmitter
The chain moves but the door remains stationary	Flat battery	Replace battery
	The opener is disengaged	Re-engage the opener
Motor is running but chain is not moving	Damage motor assembly	Contact your dealer for support.
The transmitter range varies or is restricted	Variations are normal depending on conditions e.g. temperature or external interference	Make sure you can see the door when you use the transmitter.
	The battery life is exhausted	Check the battery status by pressing a button (flashing or no light requires battery to be changed)
	Position of the transmitter in the motor vehicle	Aim the transmitter through the windscreen.
The Courtesy light does not work	LED has failed	Change LED.
The door reverses for no apparent reason	This may occur occasionally from environmental conditions such as areas that are windy, dusty or have extreme temperature changes.	Ensure the door runs smoothly before increasing the force pressure.
	If Safety beams are installed they may be partially obstructed.	Ensure the beam path is not obstructed. Check the Alignment.
Auto Close not working	Safety Beam or wiring faulty	Repair Safety Beam or replace wiring. Re-align optics. See Safety Beam instructions.
The door stops or moves very slowly under battery (Optional Battery Back Up Accessory)	The batteries may have little OR no charge	Connect mains power and leave the batteries to charge. The batteries may take 24 to 48 hours to reach their maximum charge capacity.



20. Troubleshooting

Symptom	Possible cause	Remedy
The SERVICE LED has started to flash and is beeping numerous times	A Fault has been detected. The fault will be active each time an attempt is made to operate the door.	Record opener function (How many beeps?) then press the SET button once to reset the opener. If the fault continues to be tripped contact 1300 133 944 for support.
The Open (Green) LED and Close (Red) LED are flashing alternatively	Opener is overloaded	Check the doors operation by disengaging the motor and ensuring the door runs smoothly. If necessary make door adjustments or contact your door professional.
The Open (Green) LED continues to flash	Door obstructed when opening	Clear away any obstructions and test door opens correctly. (If door is damaged, contact your door professionl).
The Close (Red) LED continues to flash	Door obstructed when closing Limits may be cleared	Clear away any obstructions and test door closes correctly. (If door is damaged, contact your door professional). Remove all power sources (including the battery backup). Wait till all lights are out (10-15 secs), then reconnect power. If Red LED is flashing, limits are not set. Reset Limits.

Date	Time	Number of Beeps

If You Need a Service Call

If the opener needs a service please call the dealer who installed the garage door opener (their contact details are usually on a sticker on the back of your garage door). For product assistance contact 1300 133 944 within Australia.

BEFORE CALLING you should have the following information to assist in providing the appropriate service:

1. Has anything happened since the opener last operated OK, e.g. a storm, a jolt to the door etc.?
2. What is the current light status on the opener?
3. Manually disengage the door (Section 16).
How easy is it to manually open and close the door?
4. What model is the opener? (Model no. information is located at the rear of the opener)
5. Who installed the opener? (Dealer details should be on a sticker on the back of your garage door)
6. When was it installed? (If known)



21. After Installation Care

21.1 Service Checklist

Preventative servicing of your garage door and opener, is just as important as servicing your car. Much like the engine of your car, your garage door is made up of numerous moving parts designed to lift and lower your door safely and efficiently.

Ongoing preventative servicing ensures that your door continues to function within factory specifications, greatly reduces the risk of failure and repair bills down the track and ensures you maintain your Warranty.



Run the Safety Testing procedures MONTHLY in Section 12 to ensure garage door is fit for use.



WARNING! Failure to maintain your your garage door voids the warranty on your garage door opener.



DO NOT DO IT YOURSELF:

Door adjustments should only be carried out by experienced persons, as this function can be dangerous if not performed under strict safety procedures.

TECHNICIAN CHECKLIST


1. Lubrication of the critical moving parts including chain drive, tracks, wheels or cable drum.
2. Tightening of door mounting points along with door bolts, screws, cables and connectors.
3. Adjustment of spring tension to limit 'spring fatigue'.
4. Adjustment of opener travel limits and force margin to ensure the door opens and closes to specification.
5. Assessment and adjustment of safety components and accessories including safety beams, Auto-Lock and Safe Lock (if installed)
6. Assessment of the door alignment and the diagnosis of irregular operation remedies.
7. Record Cycle count at each service to establish next date of service (as per table)



	SERVICE 1 (12 months after installation or 3,000 cycles)		SERVICE 2 (3 years after installation)		SERVICE 3 (5 years after installation)	
DATE:						
BUSINESS NAME:						
TECHNICIAN NAME:						
PG3 COUNTERS	OPEN	CLOSE	OPEN	CLOSE	OPEN	CLOSE
STALLS						
OBSTRUCTIONS						
SENSOR FAULTS						
OVERLOADS / CUT-OUTS						
WARRANTY CYCLES						
FIRMWARE UPDATE AVAILABLE? IF 'YES' PLEASE UPDATE FIRMWARE	YES	NO	YES	NO	YES	NO
CURRENT FORCE MARGIN						
TECHNICAL SIGNATURE:						
	SERVICE 4 (7 years after installation)		SERVICE 5 (9 years after installation)			
DATE:						
BUSINESS NAME:						
TECHNICIAN NAME:						
PG3 COUNTERS	OPEN	CLOSE	OPEN	CLOSE		
STALLS						
OBSTRUCTIONS						
SENSOR FAULTS						
OVERLOADS / CUT-OUTS						
WARRANTY CYCLES						
FIRMWARE UPDATE AVAILABLE? IF 'YES' PLEASE UPDATE FIRMWARE	YES	NO	YES	NO		
CURRENT FORCE MARGIN						
TECHNICAL SIGNATURE:						






21. After Installation Care

21.2 Battery Replacement

 **tip** Battery Type: 1 x CR2032.

STEP ONE	Light Status	Battery
 <p>Check Light Status Table </p> <p>HOLD</p>	Solid	OK
	Flashing	Replace
	No light	Replace

STEP TWO	STEP THREE
 <p>Use screwdriver to remove screws and open</p>	 <p>Use non-metallic object to push out.</p>

 **WARNING!** The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, **SEEK IMMEDIATE medical attention.**

21.3 Battery Disposal


When batteries reach the end of their usual life in accordance with Australian Battery Recycling Initiative please follow the next simple steps for protecting the environment. Refer to the Automatic Technology website for information on where to recycle batteries in Australia.

 **WARNING!** The Battery shall be disposed of properly, including keeping them away from children. Even used batteries may cause injury.

 **DO NOT** throw the batteries in municipal waste. This symbol of the crossed out wheeled bin indicates that the battery should not be placed in the municipal waste. Check your local regulations for appropriate disposal of the batteries.

Recycling all batteries will have other environmental and social benefits:

- Some batteries are less toxic but hazardous for other reasons. Lithium batteries can explode or catch fire in landfill, while button cells are dangerous if swallowed by children. Recycling offers a safe and environmentally responsible solution for end of life batteries.
- Battery recycling recovers non-renewable materials such as lead, cadmium, steel, zinc, manganese, cobalt, silver, plastics and rare earth elements.
- Removal of batteries and other hazardous household products from household waste facilitates the recovery of organic materials through alternative waste technologies such as composting. Batteries and heavy metals are known contaminants in compost.
- The community supports recycling because it reduces waste to landfill and achieves environmental benefits.

 **WARNING!** Prior to disposal, recycling, or collection, all battery terminals must be securely insulated with a non conductive material to prevent any two batteries from short circuiting and generating heat during storage or transport. Battery terminals may be insulated with electrical tape; or batteries may be individually packaged in a non conductive material (e.g., plastic bag or original packaging).

21.4 Warranty

Warranty conditional on proper servicing as listed in 21.1 Service Checklist. Full details of the warranty are available in your Owners Opener Handbook, from your nearest ATA office or visit the ATA Website ata-aust.com.au.



Automatic Technology office location

Head Office 6-8 Fiveways Blvd, Keysborough 3073 Phone (03) 9791 0200

Prefixed trademarks are the property of Automatic Technology (Australia) Pty Ltd
ABN 11 007 125 368. © 2020 Automatic Technology Australia Pty Ltd.

ata-aust.com.au

**SMART
SIMPLE
SECURE**